Quick CD Backup

Quick CD Backup allows quickly saving a portion of the video recording onto the CD-R in either the Encrypted or AVI format. Note: Quick CD backup is available on CD-R only. Please avoid using CD-RW due to the lengthy formatting process.

To perform a Quick Backup, do the following:

- 1. Insert a blank, unformatted CD-R into the CD-R drive
- 2. Select one or more cameras
 3. Set the start time in the Clock window or by clicking directly on the timeline
- 4. Right-click on the data area of the Search Bar: the context menu will appear. Select Mark Start to choose the start time.

_		10:30	11:00	11:30
- F	Front Door	= =	Mark Start	
	Parking		Mark End	
F	Reception		Clear	
W	∀arehouse		Start: n/a End: n/a	-
	CAMERA5		Start CD Backup - Encrypted	
]	Start CD Backup - AVI	

- 5. Set the end time in the Clock window or by clicking directly on the timeline
- 6. Right-click on the data area of the Search Bar. The context menu will appear. Select Mark End to choose the end time. (Note: Start Time on the Timeline has been marked with the broken green line)

	10:30	11:00	11:30
Front Door		Mark Start	
Parking		Mark End	
Reception		Clear	
Warehouse		Start: 10:43 End: n/a	
CAMERA5		Start CD Backup - Encrypte	d
	:	Start CD Backup - AVI	

7.Right-click and select Start CD backup-AVI to backup in AVI format. (Note: End Time on the Timeline has been marked with the broken red line; the segment of the recording between Start and End time lines has been highlighted in blue)

		1	0:30	11	100	11:30
	Front Door		-		Mark Start Mark End	
	Parking				Clear	
	Reception				Start: 10:43 End: 11:00	
	Warehouse				Start CD Backup - Encrypted	
	CAMERA5				Start CD Backup - AVI	
_	CINEBIC I					

Backup File Name		×	
Save as:	backup		

- 8. When backup in AVI format, enter the name for the AVI file.
- 9.To backup in encrypted format, choose Start CD backup-Encrypted in the context menu.

Mark Start Mark End		
Clear		
Start: 11:17 End: 11:41		
Start CD Backup - Encrypted		
Start CD Backup - AVI		

10. To clear the Start and End times for quick backup, click Clear in the context menu.

Mark Start Mark End
Clear
Start: 11:17 End: 11:58
Start CD Backup - Encrypted Start CD Backup - AVI